

Job Name: _____ Date: _____

Door Mark: _____ Sheet#: _____ of _____

**Use the separate "Replacement Single Door Worksheet" in addition to this when replacing door and frame.*

FRAME OPTIONS

Fire Rating: None 20min 45min 90min 3hour Smoke Door Thickness: 1-3/4" 1-3/8" Other _____

Strike prep: 4-7/8" ASA 2-3/4" "T" 2-1/4" Full Lip Strike Reinforce for Rim Panic
 Square Coreners Radius Corners

2nd Strike prep: 2-3/4" x 1-1/8 DB Strike 4-7/8" x 1-1/4" No Lip DB Strike 3-1/2" x 1-1/8" DB Strike

Hand: _____ Other preps: Closer Reinforce (Other: _____)

Anchors: Punch&Dimple Metal Stud Wood Stud Masonry "T" or Wire


Notes: _____

**Make note if hardware is to be new or reused. Hardware finish. List any other hardware such as Thresholds, weatherstrip, stops, etc.*

MEASUREMENTS


- _____ A <Inside of the frame width. (36")
- _____ B <Inside of the frame height. (84")
- _____ C <Actual door height. (83-1/8")
- _____ D <Height of the hinge prep. (4-1/2" or 5")
- _____ E <Top of frame to top of hinge.
- _____ F <Top of frame to top of hinge.
- _____ G <Top of frame to top of hinge.
- _____ H <Top of frame to top of hinge.
- _____ I <Top of frame to Centerline of Strike.
- _____ J <Height of Strike Prep. (4-7/8" or 2-3/4")
- _____ K <Top of frame to Centerline of DB Strike.
- _____ L <Height of DB Strike Prep. (2-1/4" or 3-1/2")
- _____ M <Rough Opening width 1. (40-1/2")
- _____ N <Rough Opening width 2. (40-1/2")
- _____ O <Rough Opening width 3. (40-1/2")
- _____ P <Rough Opening Height 1. (88-1/4")
- _____ Q <Rough Opening Height 2. (88-1/4")
- _____ R <Jamb Depth (5-3/4")
- _____ S <Wall thickness (4-7/8")
- _____ T <Jamb Face Dimension (2")
- _____ U <Head Face Dimension

Rabbets



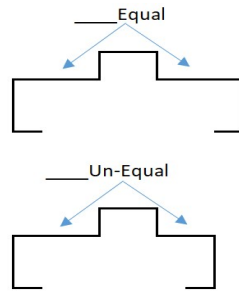


MASONRY ONLY

Butt to Block

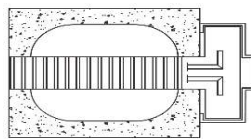

Wrap Block

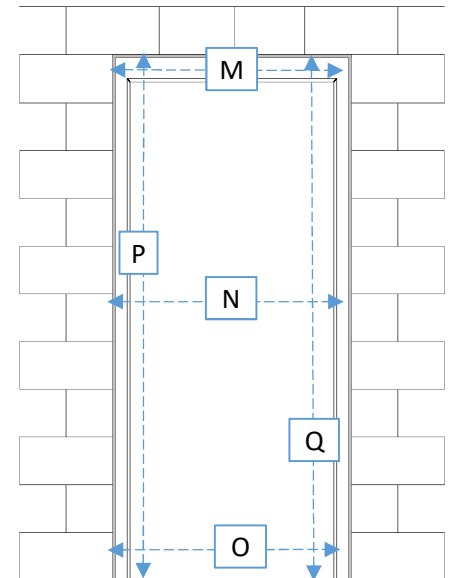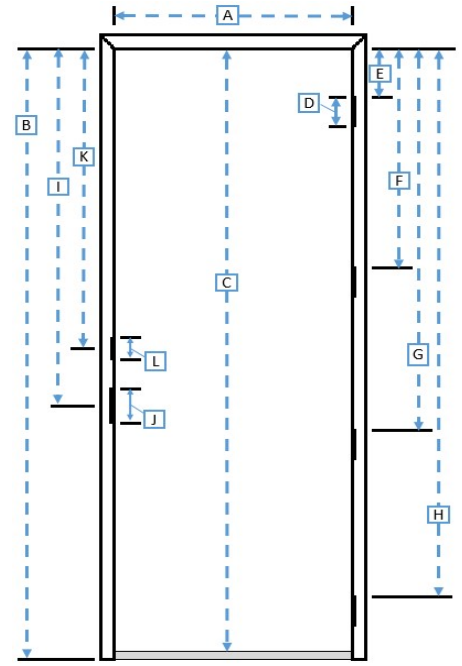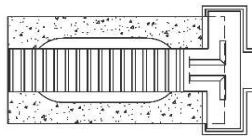

DRYWALL ONLY

- _____ Knock-Down
- _____ Welded

